



ASSEMBLY INSTRUCTIONS FOR DURPARK MINI & DURGAS CONTROL PANELS.

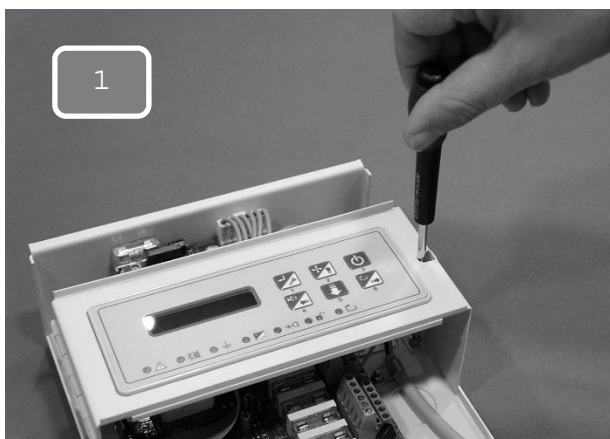

Screw on the control panel to the wall.


1 – Insert screwdriver in hole and loosen screw located in the back.

2 – Move the panel slightly upwards by liberating it from the screw and lifting it at the same time. Once the panel is fully opened, the module line connection and power supply 230V AC screw terminals will be visible.

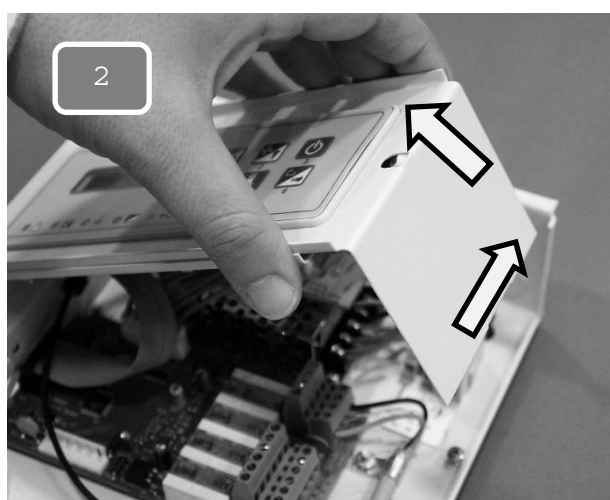

In the DURPARK MINI control panel model, you must remove the power supply source connector, which will allow you to completely open up the panel.

Once the cabling is done, and adequately redirected through the cable tie, carry out the inverse maneuver, without forgetting to tighten up the screw. Make sure that no cable has been left pressed or trapped.

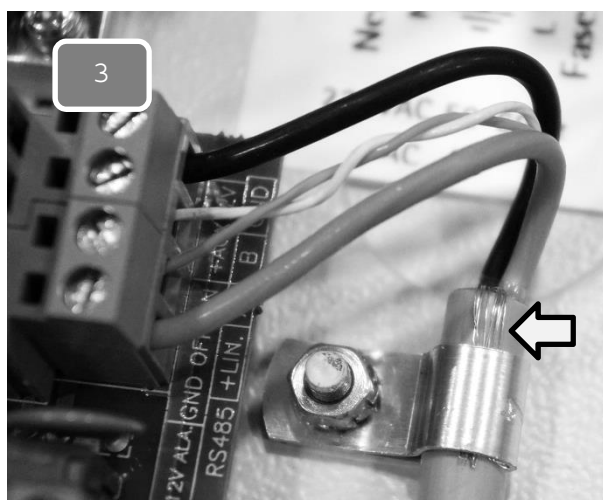

Note: for shielded type cable

3 – When you use a shielded hose with the DURGAS and DURGAS MINI control panels, set them up as is shown, using the special clamp provided.

Hold down the mesh or drain wire, as shown.